

WARNINGS:

- This product must be installed in accordance with applicable electrical and installation codes by a person familiar with the construction and operation of the product and the hazards involved.
- Proper grounding is required to insure personal safety.
- All work should be performed by a qualified electrician.
- **Ensure power is OFF before starting installation or attempting any maintenance.**

1. Disconnect Power

- Disconnect power before installation or maintenance

2. Mounting of Luminaire

- Orient the junction box with the closed end (slotted) towards the heavy side of the ballast housing.
- Slide junction box onto ballast housing and secure as shown.
- Loosen screws to mounting adapter and slide plate until fixture hangs plumb.
- Tighten both screws to secure mounting adapter.
- Thread on 3/4" safety hook and hang fixture from an approved suspension system or attach to 3/4" rigid conduit.

3. Attach Outer Metal Reflector

- Spin reflector assembly onto housing.

4. Attach Inner Reflector

- Loosen the two inner reflector screws.
- Align inner reflector keyhole slots with screws, rotate, and tighten screws to secure.

5. Electrical Connections

- Multiple voltage wires may be present - ensure correct lead is used.
- Connect proper supply voltage lead to fixture voltage lead as marked.
- Connect neutral supply lead to fixture lead marked COM.
- Connect fixture ground lead (green, green tracer predominantly green) to suitable ground.
- Cap all unused leads.
- Secure junction box cover as shown.

6. Install Lamp




- Lamps must be OPEN RATED.
- For optimum performance, use clear lamps with a base up operating position.

7. Distribution Adjustment/Setting

- If a lighting layout has been performed for your facility, note the recommended adjustment indices. General distribution settings may be found in the table at right.
- Match the top of the adjustment ring to the bottom line of the index box as shown in the figures at right (shown set at N2).
- Ensure wing nut is aligned with adjustment housing slots; tighten to secure reflector assembly.

GENERAL:

- Ballast assembly is shipped separately from the reflector components.
- Thoroughly inspect shipment for freight damage and notify carrier as needed.
- Verify the catalog description listed on the packing slip with the fixture and part component labels.
- Contact manufacturer before making any fixture alterations or for additional information as needed.

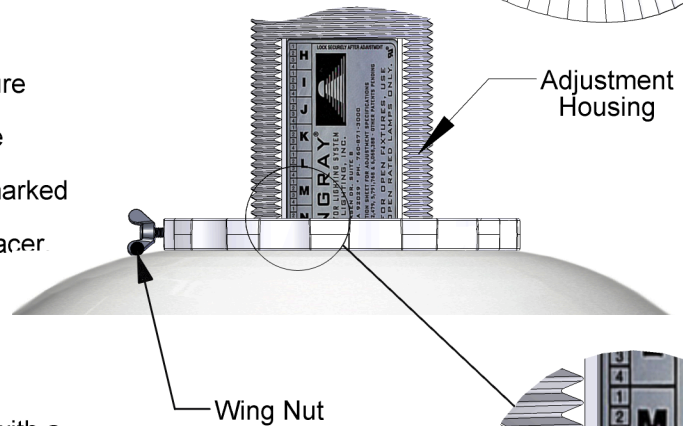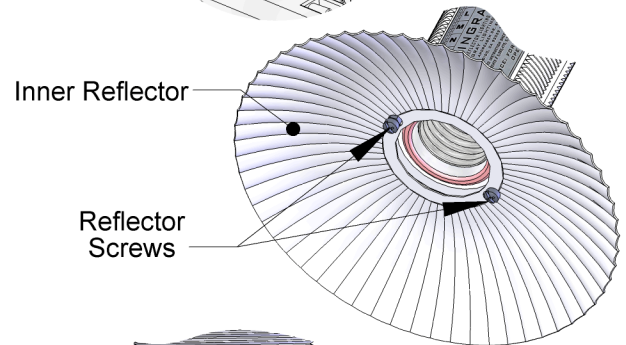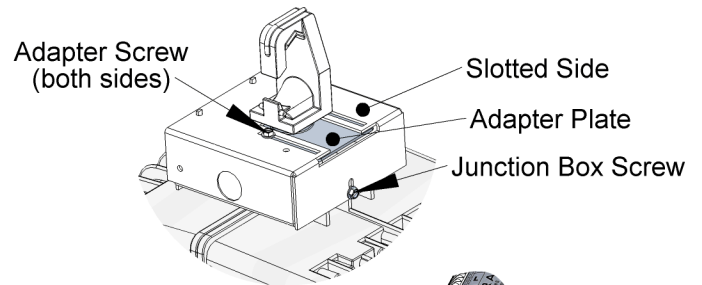

| SC | Reflector Index | Distribution |
|-----------|-----------------|--------------|
| 0.7 - 1.2 | N1 | Medium |

